

ARB & TJM Fit Kit (31103)

Place these instructions in the vehicle's glove box after installation is complete.


Important: Please read these instructions carefully prior to installation.


Check the contents of kit before commencing fitment and report any discrepancies


This kit is to be used in conjunction with the fitting kit supplied with your Rhino Rack FOXWING Awning by OZTENT


Parts List

Item	Component Name	Qty	Part No.
1	U-bolt 28mm Round	6	C752
2	Foxwing Roof Tray Bracket	2	C716
3	Foxwing Roof Tray Packer	2	C754
4	M6 Nyloc Nut	12	N013
5	M6 x 16 Stainless Flat Washer	12	W031
6	Fitting Instructions	1	RR213

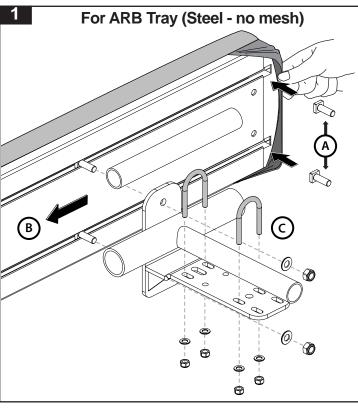

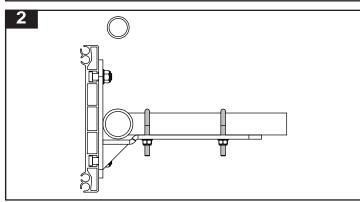


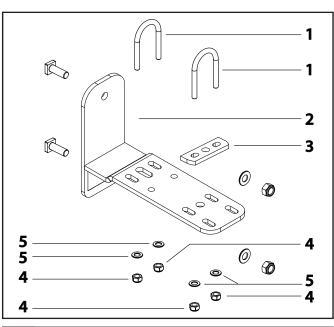


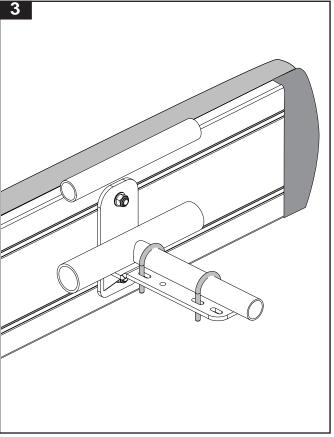




Rhino-Rack FOXWING ARB and TJM Bracket

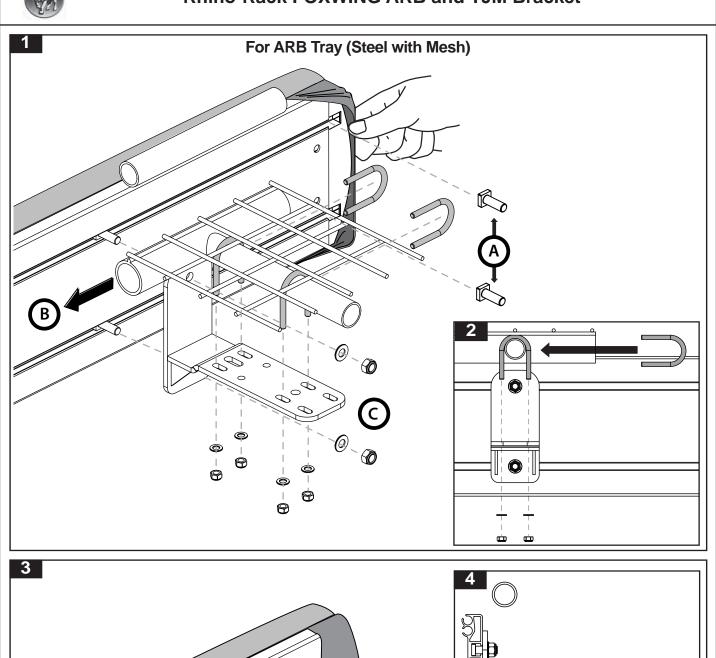


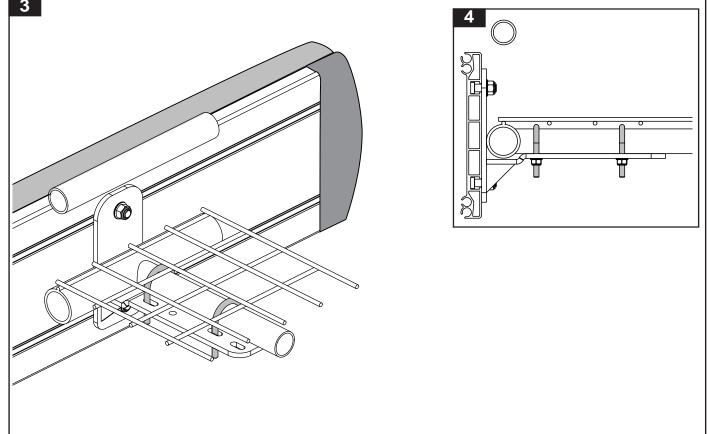




Rhino-Rack FOXWING ARB and TJM Bracket

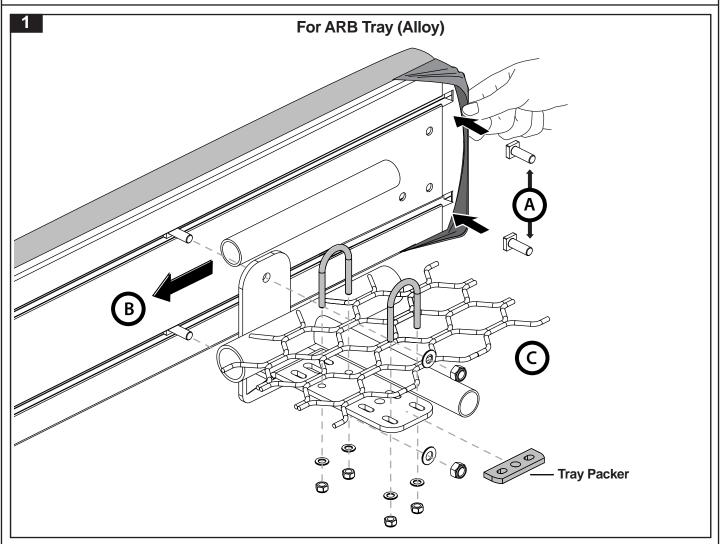


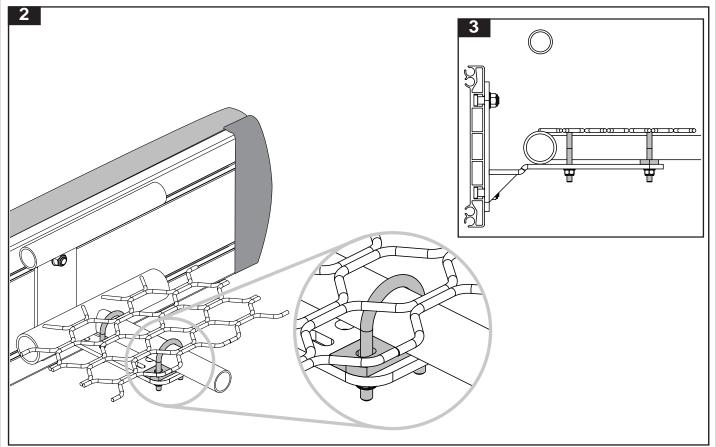





Rhino-Rack FOXWING ARB and TJM Bracket

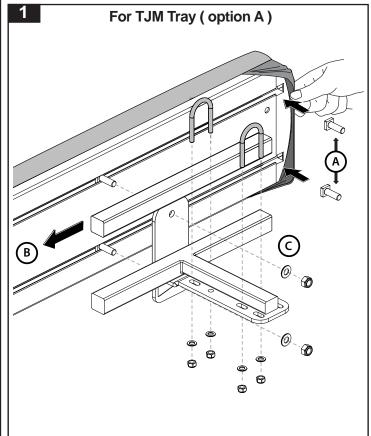

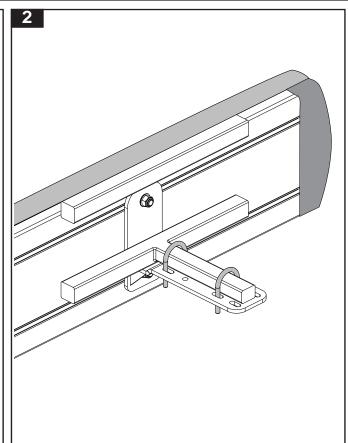

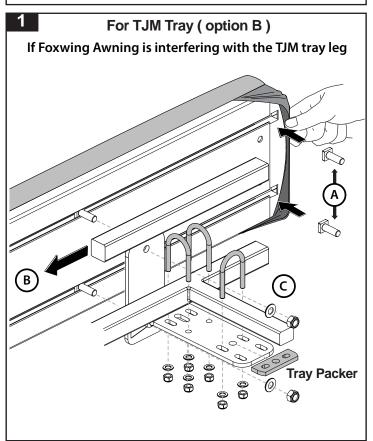

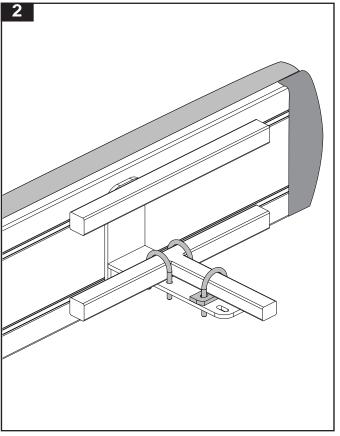

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: RR213 Prepared By: Andy Wana Authorised By: Gary England

Issue No: 01 Issue Date:25/03/2009